TABLE OF CONTENTS

Introduction		1
Wirefr	ame & Surfaces	2
Pull D	own Menus	3
	Edit	
	Insert	
	Tools	
Genei	rative Shape Design Workbench	
	n Toolbar	
	Tools	
	Analysis	
Volum	nes	
	nced Surfaces	
	oped Shapes	
	emplates	
DIVV I	emplates	J
Wireframe .		1 5
	·	
Pomis		
	Coordinate	
	On curve	
	On plane	
	On surface	
	Circle / Sphere / Ellipse center	
	Tangent on curve	
	Between	
	Point Repetition	
	Projecting points 3	
	Intersection points 3	38
	Extremum	11
	Polar Extremum	14
Lines	4	16
	Point-Point	
	Point-Direction	
		50
	Tangent to curve	
	-	58
		30
		32
		_
	, 5	33
		34
	Polyline 6	36

Plane	s
	Offset from plane
	Parallel through point
	Angle/Normal to plane
	Through three points
	Through two lines
	Through point and line
	Through planar curve
	Normal to curve
	Tangent to surface
	Equation
	Mean through points
	Plane Between
Circle	S
211010	Center and radius
	Center and point
	Two points and radius
	Three points
	Bitangent and radius
	0
	Bitangent and point
	Tritangent
O	Center and tangent
	rs
Jurve	s
	Connect Curves
	Conics
	Splines
	Helixes
	Spirals
	Project curves
	Combine curves
	Reflect Line curves
	Intersection curves
	Parallel Curves
	3D Curve Offset
	Curve comparison
Supp	orts
• •	Work on Support
Creat	on on the fly
	/ing
	ns
	t repetition
عرد ح	

Surfaces	65
Extruded	65
Revolution	67
Sphere	69
Cylinder	71
· · · · · · · · · · · · · · · · · · ·	73
Variable Offset 1	76
Rough Offset 1	78
<u> </u>	79
·	82
·	82
·	82
	90
<u> </u>	94
, y	96
Two limits	96
Limit and middle 2	200
With reference surface	201
	203
	205
	207
With two tangency surfaces	211
Circular	213
Three guides 2	213
Two guides and radius 2	215
Center and two angles 2	217
Center and radius 2	219
Two guides and tangency surface	221
One guide and tangency surface	223
Limit curve and tangency surface	225
Conical	227
Two guide curves 2	227
Three guide curves 2	229
Four guide curves 2	231
Five guide curves 2	233
1	235
	241
Multi-section surfaces	245
Blend surfaces 2	255
Spines	261
Isoparametric Curves 2	
Laura	200

Operations	'9
Joining Elements	'9
Healing Surfaces	
Curve smoothing	90
Splitting Elements) 1
Trimming Elements	7
Untrimming Elements	0
Disassembling Elements)2
Extracting Boundaries and Faces)4
Multiple Extract	
Creating the Nearest Element	
Fillets	
Shape Fillet	4
Edge Fillet	
Variable Radius Fillet	
Chordal Fillet	24
Face to Face Fillet	26
Tritangent Fillet	27
Styling Fillet	29
Transformations	
Translate	34
Rotate	36
Symmetry	37
Scale	
Affinity	39
Axis to Axis	12
Patterns	ŀ3
Rectangular	ŀ3
Circular	ŀ6
User Defined	17
Extrapolating Curves and Surfaces	18
Multi-Selection	53
Analysis	59
Connect Checker Analysis	59
Draft Analysis	9
Surfacic Curvature Analysis	'3
Porcupine Curvature Analysis	
Geometric Information	
Dress-Up	8

Geometrical Set Management Inserting Sets Changing Sets Hiding and Showing Components Activating and Deactivating Components Reordering Components Groups Isolating Geometry Copying and Pasting Geometry	391 392 394 394 395 397
Ordered Geometrical Set Management	402 404 406 408 408
Semi-Regular	4111 4124 4144 416 417 418 421 421 421 421 427 431
Review	437
Problem #01 4 Problem #02 4 Problem #03 4 Problem #04 4 Problem #05 4 Problem #06 4	463 464 465 466 468 470

	v
Sh	A
Pa	A B 477 Int Design Using Surfaces 477 Split 477 Thick Surface 479 Close 480 Sew 481 Pad/Pocket 483 solean Operations 484
	C
	50 503 Eveloped Shapes 503 Unfold Surfaces 503 Transfer 507 Develop Wires 510
	E 513 W Templates 513 Junction Surfaces 513 Diabolo 515 Hole 517 Hole Curve 521 Mating Flange 525 Bead 528 3D Working Supports 530
	F
	G

Introduction

CATIA Version 5 Wireframe & Surfaces

Upon completion of this course, the student should have a full understanding of the following topics:

- Creating wireframe geometry
- Creating surfaces
- Performing operations on surfaces
- Modifying wireframe and surfaces
- Analyzing curves and surfaces
- Utilizing wireframe and surfaces in Part Design

Wireframe & Surfaces

Many parts can be created using just the Part Design tools; however, there are times when surfaces need to be used in order to get the desired shape for your part. Wireframe geometry is also necessary at times to define support geometry for the various Part Design tools as well as the surface tools. Surfaces provide the ability to create complex contours that are often necessary in your design. There are a few workbenches in CATIA V5 that have wireframe and surface options. This class will focus on the Generative Shape Design workbench. The Generative Shape Design workbench has all of the tools that are available on the Wireframe & Surfaces workbench and more. This course will cover all of the options found in the Generative Shape Design workbench.

As covered in previous courses, surfaces can be used within Part Design. This gives the capability of hybrid modeling. To review, you should remember that you can perform four operations with surfaces in Part Design. One option is to add thickness to a surface thereby creating a solid. A second option is to split your part with a surface. A third option is to sew a surface into your part, which will either add or remove material, or both. The last option is to close a surface with planar faces to form a solid. These options should be reviewed and there are review exercises located in Appendix B. It is also important that you understand how to work with the boolean operations in order to fully utilize all of the surface options. These are reviewed in Appendix B as well.

It is important to understand some of the terminology that CATIA uses when working with wireframe and surfaces. You should already be familiar with a PartBody and know that you can have more than one within your part. Wireframe geometry and surfaces are created within geometrical sets. You may also have more than one geometrical set in your part. Geometrical sets are used to organize your non-solid geometry. When you create new wireframe or surface geometry, you will need to be sure that the correct geometrical set is current in order to have an organized tree.

Wireframe

Wireframe geometry is critical to the creation of surfaces and is used as reference geometry throughout CATIA.

Points

Points are useful to define specific locations and to assist in the creation of other wireframe geometry. You have a variety of options to define points. This exercise will explore those options.


Coordinate

Open the Points document. You should see a surface and some wireframe geometry.

Change to the Generative Shape Design workbench. If you are already in the workbench then you will not need to change. If not, to change workbenches you can select pull down menu Start, Shape, Generative Shape Design.



Select the Point icon. A *Point Definition* window appears.

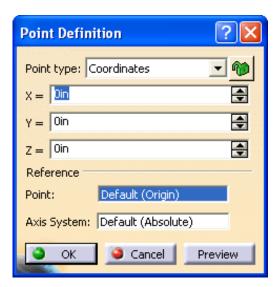

Point type

Specifies what type of point you want to create, either *Coordinates*, On curve, On plane, On surface, Circle/Sphere/Ellipse center, Tangent on curve or Between

X=, Y=, Z=

The coordinate values of the point that you want to create from the reference point

Reference


Point

The point that the coordinates are based from. The default is the origin.

Axis System


Defines the axis system that will be used to create the point

Right select in the *Axis System selection box.* A contextual window appears.

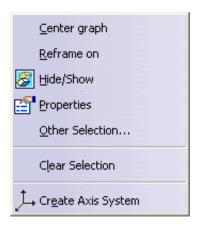

Select *Clear Selection*. By default, the active axis system is used to create a coordinate point. By clearing the Axis System selection box, the absolute axis system will be used to define the point.

Key in 2.0, 4.0, 2.0 for the X, Y and Z values respectively and select OK. You should have noticed a preview of the point as you were keying in the values before you selected OK. It should appear similar to the diagram shown below.

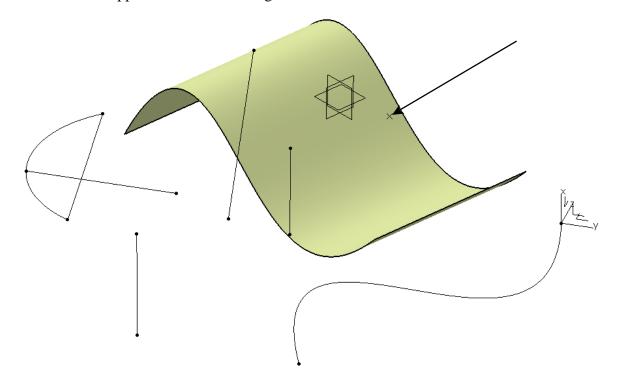


Select the Point icon again. The *Point Definition* window appears. This time you are going to use a point as the reference instead of the origin.

Clear the *Axis System* selection box so that the absolute axis system will be used and select the point you just created to define the *Reference Point*. The point is labeled as *Point* and the name of the point appears in the *Point* area of the window.

Key in 0.0, 2.0, 1.0 for the X, Y and Z values respectively and select OK. The new point is created based from the original point instead of the origin.

Select the Point icon again. The *Point Definition* window appears. This time you are going to create a point using the axis system that has been created instead of using the absolute axis system.

Key in 1.0, 2.0, 0.0 for the X, Y and Z values respectively and select *OK.* The point is created based from the origin of *Axis System.1* instead of t he absolute axis system. Your model should appear similar to the diagram shown below.

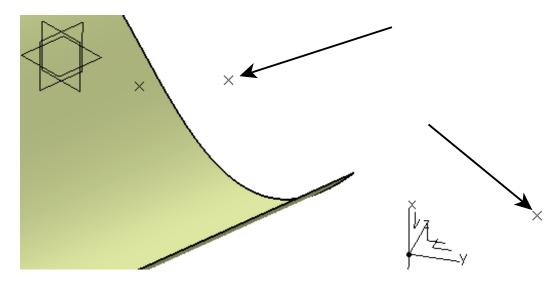


You can also create points on elements such as curves, planes and surfaces.

On curve

Select the Point icon. The *Point Definition* window appears.

Change the *Point type* to *On curve*. The options in the window change.

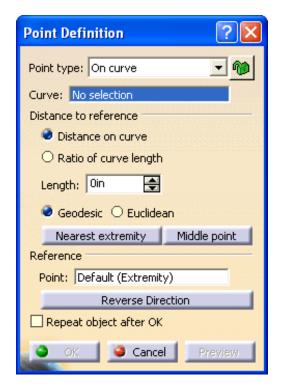

Curve Specifies the curve on which you are going to create a point on

Distance to reference

Distance on curve

	the reference point
Ratio of curve length	Allows you to specify a ratio between the reference point and the extremity
Length/Ratio	You can specify a <i>Length</i> if the <i>Distance on curve</i> option is used or a <i>Ratio</i> if the <i>Ratio of curve length</i> option is used

Geodesic The length is measured along the curve

Euclidean Corresponds to Distance on curve only, the length is

the absolute value from the reference point

Allows you to specify a distance along the curve from

Nearest extremity Creates the point at the nearest extremity

Middle point Creates a point at the midpoint of the curve

Reference

Point Allows you to specify a reference point if you do not

want to use an extremity as the reference

Reverse Direction Reverses which side of the reference is used or which

extremity is used when creating the point

Repeat object after OK Allows you to create multiple equidistant points

Select the curve on the right. The curve is labeled *Curve* in the display and the extremity shows an arrow.

Turn the *Distance on curve* option on, change the *Length* to be 5.0 and make sure it is set to *Geodesic*. The point appears 5 inches along the curve.


Turn the *Euclidean* **option on instead of the** *Geodesic* **option.** The point is still on the curve but it is 5 inches from the reference point instead of being 5 inches along the curve.

Select *OK***.** The point is created.

Select the Point icon again, make sure the *Point type* is set to *On curve* and select the curve on the right.

Turn on the *Geodesic* and *Ratio of curve length* options and change the *Ratio* to 0.25 and select *Preview*. A point appears a quarter of the way along the curve. A ratio of 0.5 is the midpoint of the curve. You should note that only the *Distance on curve* option can use the *Euclidean* option.

Select OK. The point is created and should appear similar to the diagram shown below.

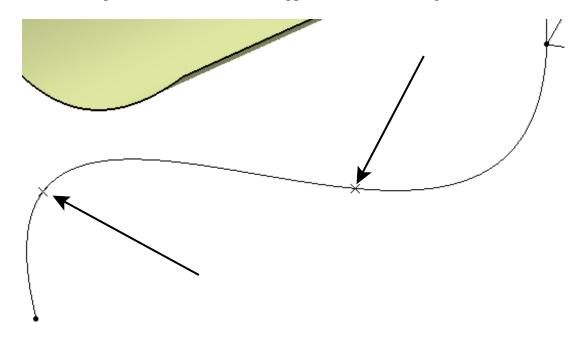

Select the Point icon again and make sure the *Point type* is set to *On curve*. Select the curve on the right.


Select the *Nearest extremity* **button.** The point appears at the nearest endpoint of the curve.

Select the *Middle point* **button and select** *OK***.** The point appears at the midpoint of the curve.

Select the Point icon again and make sure the *Point type* is set to *On curve*. Select the curve on the right. This time you are going to use a reference point other than an extremity. All the other options work the same except the distance and ratio, which are based from the reference point.

Turn on Distance on curve, Geodesic and change the Length to 3.0.

Select in the *Reference Point* **box and select the point shown below.** Notice the direction of the arrow.

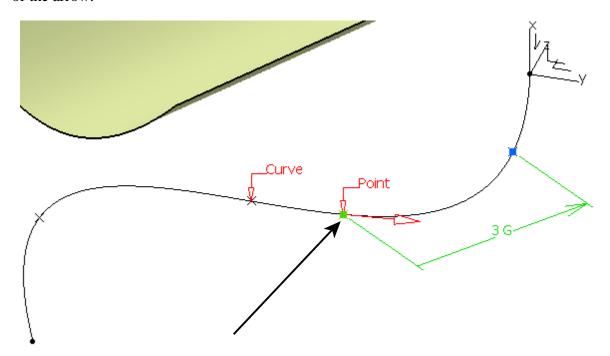


Select the *Reverse Direction* **button.** The arrow points the opposite direction. If you were using an extremity then reversing the direction would cause the reference point to switch to the other end of the spline.

Select *OK***.** The point is created.


Select the Point icon again and make sure the *Point type* is set to *On curve* and select the curve on the right.

Turn on Distance on curve, Geodesic and change the Length to 1.0.

Select the *Reverse Direction* **button.** This moves the reference to the other end.

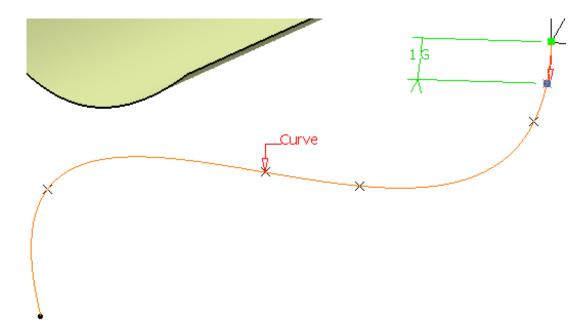

Turn on Repeat object after OK and select OK. The Points & Planes Repetition window appears.

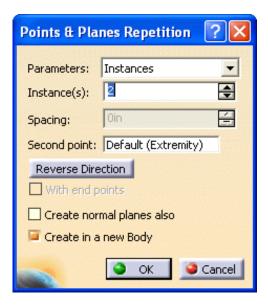

These options will be covered in detail a little later in the book. This was just meant to introduce a method for creating multiple points.

Select *Cancel*. Only the one point is created. This completes the options for creating a point on a curve.

Select off of the point in order to release it.

Surfaces

Surfaces are extremely important for defining any type of contour. Using wireframe geometry, you can create surfaces to represent any contour that you need. Once you have created the surface(s) that you need you can then use them in Part Design to contour your solid model. You have a variety of options to create surfaces. Some options are straightforward while others are much more involved.

Extruded


Extruded surfaces are created by extruding an element in a linear direction. The resulting object is called *Extrude*.

Open the Basic Surfaces document. You should see some wireframe geometry.

Select the Extrude icon.



An Extruded Surface Definition window appears.

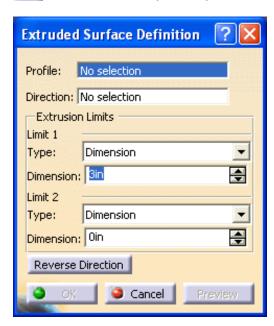

Specifies the shape that will be extruded **Profile**

Defines the direction of the extrusion Direction

Extrusion Limits


Limit 1/2 Defines the direction and limits for the extrusion

> Specifies either a constant dimension or up to a selection Type

Dimension Specifies the limit distance

Reverses the direction of the extrusion Reverse Direction


Select the curve as shown below. Since this curve was created in a sketch, the extrude option automatically assumes you want to go normal to the sketch.

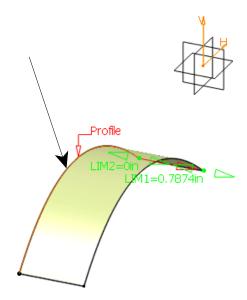

Key 3.0 for *Limit 1*, 1.0 for *Limit 2*, select the *Reverse Direction* button and select *OK*. The surface is created.

Select the Extrude icon again. The *Extruded Surface Definition* window appears.

Select the curve and plane as shown below. The plane defines the direction to be normal to the plane.

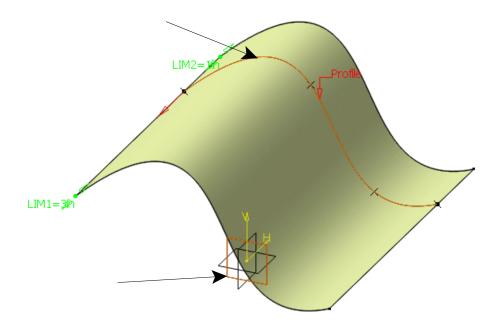

Change the limits so that both are 1.0 inch and select OK. The surface is created.

Revolution

Revolution surfaces are created by rotating an element around an axis. The resulting object is called a *Revolute*.

Select the Revolve icon. The *Revolution Surface Definition* window appears. The icon is located under the extrude icon.



Profile Specifies the shape that will be revolved

Revolution axis Defines the axis around which the profile will revolve. If your profile

is a sketch and has an axis defined in it then that will be the default


revolution axis.

Angular Limits


Angle 1 Defines the starting angle for the revolution

Angle 2 Defines the ending angle for the revolution

Select the profile and line as shown below.

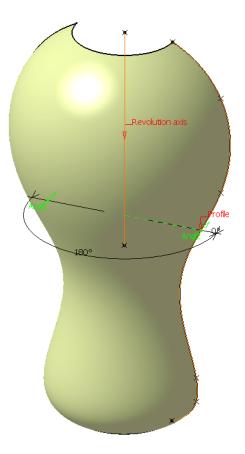


Change Angle 1 to be 0.0 and Angle 2 to be 180 and select OK. The surface is created.

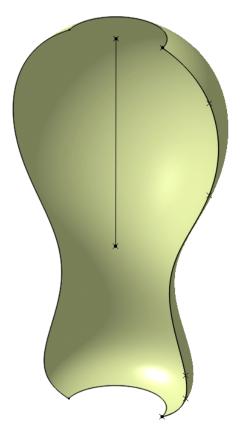

Sphere

Sphere surfaces are created by defining a center point and a radius. The resulting object is called a *Sphere*.

Select the Sphere icon. The *Sphere Surface Definition* window appears. The icon is located under the extrude or revolve icon.

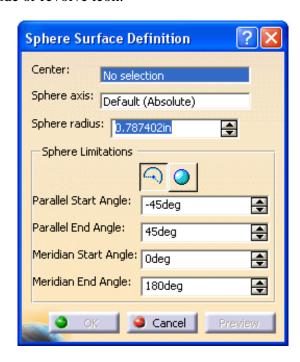


Center Specifies the center point of the sphere


Sphere axis Determines the orientation of the Parallel and Meridian curves

Sphere radius Defines the radius of the sphere


Sphere Limitations

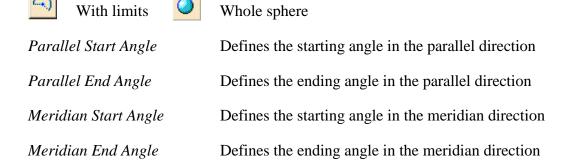


Select the point as shown below, key 1.5 for the *Sphere radius* and select *Preview*. Since you do not have any other axis to select, you will use the default. The *Parallel* limits have a range of -90 to 90 while the *Meridian* limits have a range of -360 to 360. Basically, the *Parallel* limits are the up and down limits and the *Meridian* limits are the left and right limits. Of course, this depends on your axis.

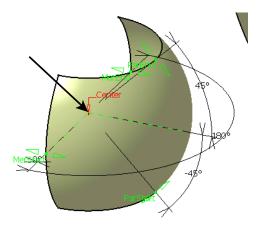

Change the *Parallel Start Angle* to -60, the *Parallel End Angle* to 30, the *Meridian Start Angle* to 135 and the *Meridian End Angle* to 225, and select *Preview*.

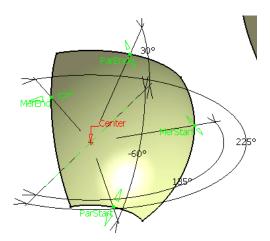


Select the Whole Sphere icon from the window and select *OK.* Notice that all the limit options were made unavailable.

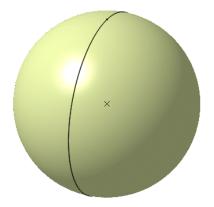

Cylinder

Cylindrical surfaces are created by defining a point and a direction, then you can specify a length and radius. The resulting object is called a *Cylinder*.

Select the Cylinder icon. The *Cylinder Surface Definition* window appears. The icon is located under the extrude or sphere icon.

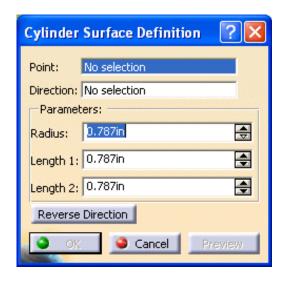

Point Specifies the center point of the cylinder

Direction Specifies the direction the cylinder will extrude


Parameters

Radius Defines the radius of the cylinder

Length 1,2 Defines the length of the cylinder in both directions


Reverse Direction Reverses the direction of the cylinder

Select the point and line as shown below.

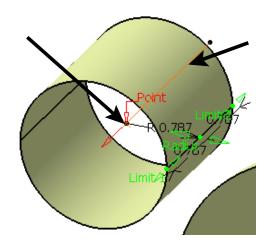

Change the Radius to 0.5, Length 1 to 2.0, Length 2 to 0.0. The cylinder changes size.

Select the Reverse Direction button and select OK. The surface is created.

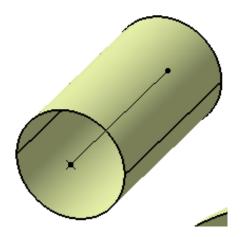


Offset


Offset surfaces are created by offsetting an existing surface a specified distance. The resulting object is called an *Offset*.

Select the Offset icon.



The Offset Surface Definition window appears.

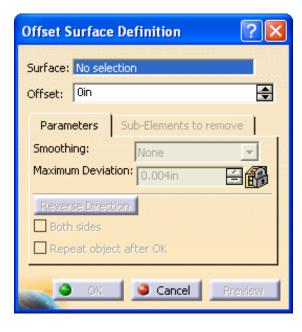

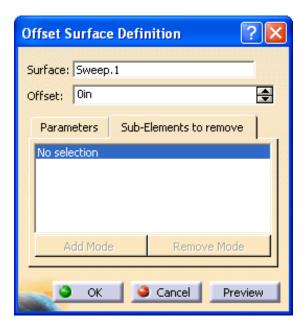

Surface Specifies the surface that will be offset

Offset Defines the distance of the offset

Parameters

Smoothing A smoothing is applied if a constant offset will not

work, if it still will not work then a warning message

is given

Maximum Deviation Defines the maximum amount the new surface can

vary from the original

Reverse Direction Reverses the direction of the offset


Both sides Offsets the surface both directions

Repeat object after OK Allows you to repeat the offset numerous times

Sub-Elements To Remove

If an offset has problems then you can perform the offset without the sub-elements that have errors. The sub-elements will be listed in the *Sub-Elements To Remove* list. This is useful when trying to determine why an offset fails. You can *Add* or *Remove* sub-elements to the list.


Select the surface as shown below, key 0.25 for the *Offset* and select *Preview*. An offset surface appears.

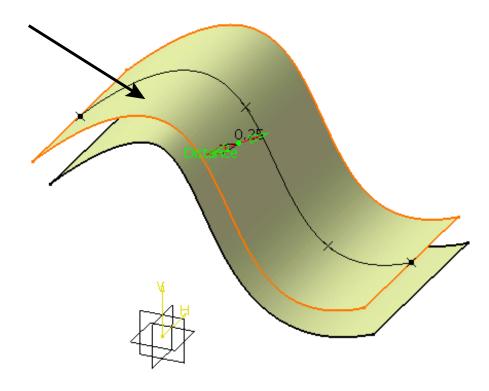


Select the *Reverse Direction* **button and select** *OK.* The offset surface appears above the original surface instead of below it.

Select the Offset icon again. The *Offset Surface Definition* window appears.

Select the surface as shown below, key 0.5 for the *Offset* and select *Preview*. An offset surface appears below the original.

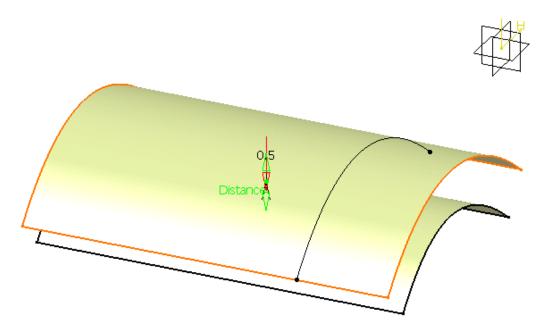

Turn on the *Both sides* **option and select** *OK***.** Offset surfaces appear above and below the original surface.

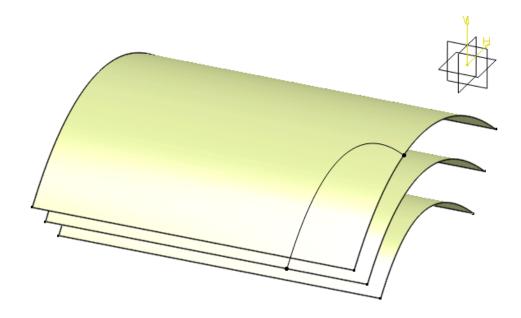

Note: Since the offset surface has a Repeat object after OK option, you can use the object repetition icon on offset surfaces.


Save and close your document.

Variable Offset

A variable offset surface is created by offsetting a multiple element surface and specifying different offset values for the sub-elements. The resulting element is called a *Variable Offset*.

Open the Offset Surfaces document. You should see a surface that is comprised of three sub-elements.

Select the Variable Offset icon. The *Variable Offset Definition* window appears. The icon is located under the offset icon.

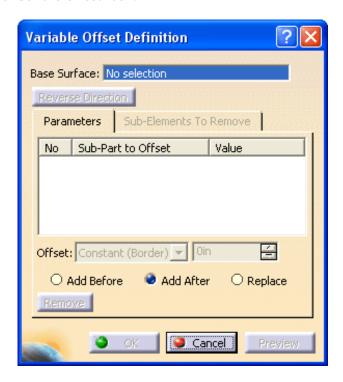

Global Surface

Specifies the surface that is going to be offset, it should contain multiple sub-elements

Parameters

Allows you to define each sub-element with a *Constant Offset* or a variable offset. If you choose a constant offset then a value must be specified.

Add Before Allows you to add a sub-part before the current one

Add After Allows you to add a sub-part after the current one

Replace Allows you to replace the current sub-part with another

Remove Removes the current sub-part

The other options are the same as offset.

Select the surface. This defines the *Global Surface*. In order to define the sub-parts you will have to select them from the specification tree.

Select *Extrude.1* **from the specification tree.** This defines a sub-part.


Set the Offset option to be Constant and key 1.0 for the value.

Select *Blend.1* from the specification tree and set the *Offset* option to be *Variable*. This makes this sub-part variable.

Select *Extrude.2* **from the specification tree.** This will be the last sub-part.

Set the Offset option to be Constant and key 0.25 for the value.

Make sure the arrow is pointing upwards and select Preview.

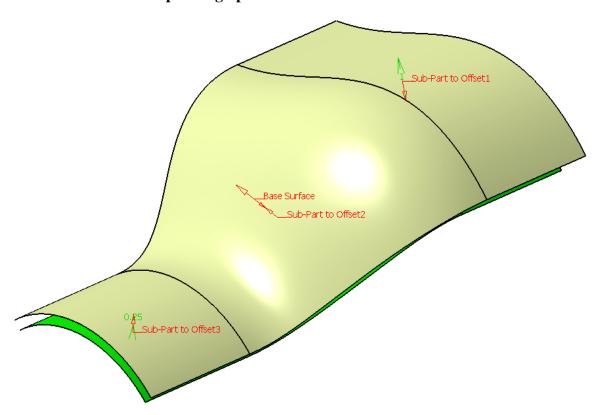

Select OK. The variable offset surface is created.